
 
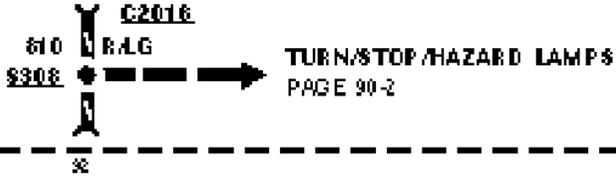


NOT AT ALL TIMES




NOT IN START OR RUN

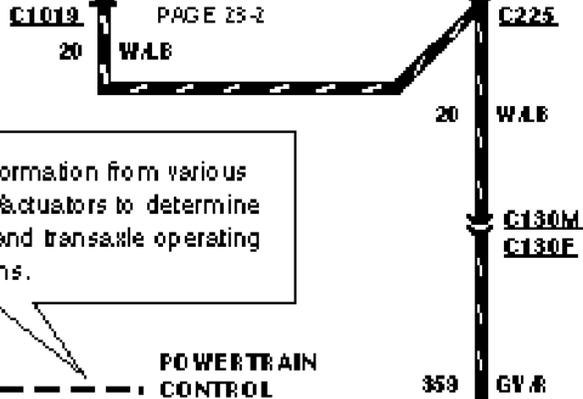


Uses information from various sensors & actuators to determine engine and transaxle operating conditions.

POWERTRAIN CONTROL MODULE (PCM)

FROM ENGINE COMPARTMENT FUSE/RELAY BOX ON PAGE 23-5

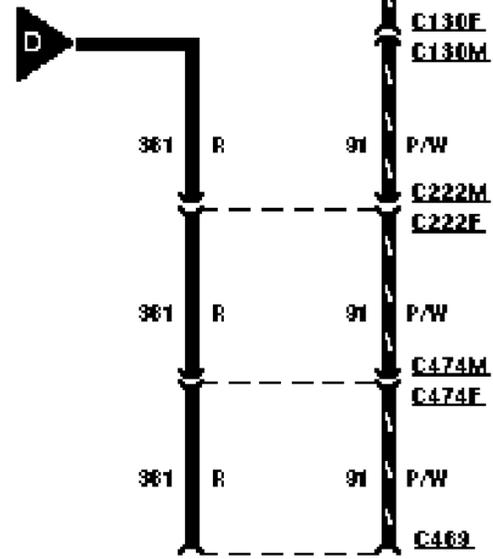

(NOT USED)

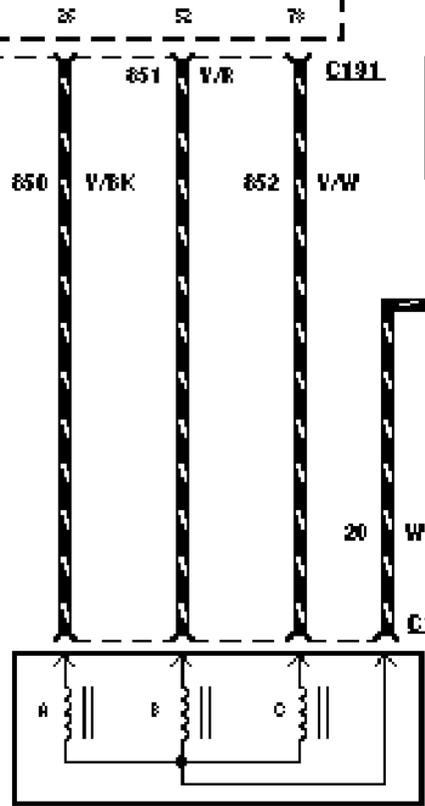

Provides high voltage spark to spark plugs.

Suppresses ignition noise (radio interference).

