

Document
2004 Chevrolet Tracker - 4WD

Diagnostic Trouble Code (DTC) Type(s)

Diagnostic Trouble Code (DTC)	Type
P0101 Mass Air Flow (MAF) Sensor Performance	B
P0102 Mass Air Flow (MAF) Sensor Circuit Low Voltage	A
P0103 Mass Air Flow (MAF) Sensor Circuit High Voltage	A
P0107 Manifold Absolute Pressure (MAP) Sensor Circuit Low Voltage	B
P0108 Manifold Absolute Pressure (MAP) Sensor Circuit High Voltage	B
P0111 Intake Air Temperature (IAT) Sensor Performance	B
P0112 Intake Air Temperature (IAT) Sensor Circuit Low Voltage	A
P0113 Intake Air Temperature (IAT) Sensor Circuit High Voltage	A
P0116 Engine Coolant Temperature (ECT) Sensor Performance	B
P0117 Engine Coolant Temperature (ECT) Sensor Circuit Low Voltage	A
P0118 Engine Coolant Temperature (ECT) Sensor Circuit High Voltage	A
P0121 Throttle Position (TP) Sensor Performance	B
P0122 Throttle Position (TP) Sensor Circuit Low Voltage	A
P0123 Throttle Position (TP) Sensor Circuit High Voltage	A
P0125 Engine Coolant Temperature (ECT) Excessive Time to Closed Loop Fuel Control	B
P0128 Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature	B
P0131 Heated Oxygen Sensor (HO2S) Circuit Low Voltage Bank 1 Sensor 1	B
P0132 Heated Oxygen Sensor (HO2S) Circuit High Voltage Bank 1 Sensor 1	B
P0133 Heated Oxygen Sensor (HO2S) Slow Response Bank 1 Sensor 1	B
P0134 Heated Oxygen Sensor (HO2S) Circuit Insufficient Activity Bank 1 Sensor 1	B
P0135 Heated Oxygen Sensor (HO2S) Heater Performance Bank 1 Sensor 1	B
P0137 Heated Oxygen Sensor (HO2S) Circuit Low Voltage Bank 1 Sensor 2	B
P0138 Heated Oxygen Sensor (HO2S) Circuit High Voltage Bank 1 Sensor 2	B
P0141 Heated Oxygen Sensor (HO2S) Heater Performance Bank 1 Sensor 2	B
P0151 Heated Oxygen Sensor (HO2S) Circuit Low Voltage Bank 2 Sensor 1	B
P0152 Heated Oxygen Sensor (HO2S) Circuit High Voltage Bank 2 Sensor 1	B
P0153 Heated Oxygen Sensor (HO2S) Slow Response Bank 2 Sensor 1	B
P0154 Heated Oxygen Sensor (HO2S) Circuit Insufficient Activity Bank 2 Sensor 1	B
P0155 Heated Oxygen Sensor (HO2S) Heater Performance Bank 2 Sensor 1	B
P0157 Heated Oxygen Sensor (HO2S) Circuit Low Voltage Bank 2 Sensor 2	B

P0158 Heated Oxygen Sensor (HO2S) Circuit High Voltage Bank 2 Sensor 2	B
P0161 Heated Oxygen Sensor (HO2S) Heater Performance Bank 2 Sensor 2	B
P0171 Fuel Trim System Lean Bank 1	B
P0172 Fuel Trim System Rich Bank 1	B
P0174 Fuel Trim System Lean Bank 2	B
P0175 Fuel Trim System Rich Bank 2	B
P0300 Engine Misfire Detected	B
P0301-P0306 Cylinder Specific Misfire Detected	B
P0335 Crankshaft Position (CKP) Sensor Circuit	A
P0340 Camshaft Position (CMP) Sensor Circuit	A
P0401 Exhaust Gas Recirculation (EGR) Flow Insufficient	B
P0402 Exhaust Gas Recirculation (EGR) Flow Excessive	B
P0403 Exhaust Gas Recirculation (EGR) Solenoid Control Circuit	A
P0420 Three Way Catalyst (TWC) System Low Efficiency Bank 1	B
P0430 Three Way Catalyst (TWC) System Low Efficiency Bank 2	B
P0442 Evaporative Emission (EVAP) System Small Leak Detected	B
P0444 Evaporative Emission (EVAP) Purge Solenoid Control Circuit Low Voltage	B
P0445 Evaporative Emission (EVAP) Purge Solenoid Control Circuit High Voltage	B
P0447 Evaporative Emission (EVAP) Vent Solenoid Control Circuit Low Voltage	B
P0448 Evaporative Emission (EVAP) Vent Solenoid Control Circuit High Voltage	B
P0451 Fuel Tank Pressure (FTP) Sensor Performance	B
P0452 Fuel Tank Pressure (FTP) Sensor Circuit Low Voltage	B
P0453 Fuel Tank Pressure (FTP) Sensor Circuit High Voltage	B
P0455 Evaporative Emission (EVAP) System Large Leak Detected	A
P0456 Evaporative Emission (EVAP) System Very Small Leak Detected	B
P0461 Fuel Level Sensor Performance	B
P0463 Fuel Level Sensor Circuit High Voltage	B
P0464 Fuel Level Sensor Circuit Intermittent	B
P0496 Evaporative Emission (EVAP) System Flow During Non-Purge	B
P0500 Vehicle Speed Sensor (VSS) Circuit	A
P0505 Idle Control System	B
P0506 Idle Speed Low	B
P0507 Idle Speed High	B
P0601 Control Module Read Only Memory (ROM)	A
P0616 Starter Relay Control Circuit Low Voltage	B
P0617 Starter Relay Control Circuit High Voltage	B
P0705 Transmission Range (TR) Sensor Circuit	B
P0707 Transmission Range (TR) Sensor Circuit Low Voltage	B

P0717 Input/Turbine Speed Sensor Circuit Low Voltage	A
P0720 Output Speed Sensor Circuit	B
P0722 Output Speed Sensor Circuit Low Voltage	A
P0741 Torque Converter Clutch (TCC) Circuit Performance or Stuck Off	B
P0742 Torque Converter Clutch (TCC) Circuit Stuck On	B
P0743 Torque Converter Clutch (TCC) Enable Solenoid Control Circuit	A
P0751 Shift Solenoid (SS) 1 Performance	B
P0752 1-2 Shift Solenoid Stuck On	B
P0753 Shift Solenoid (SS) 1 Control Circuit	A
P0756 Shift Solenoid (SS) 2 Performance or Stuck Off	B
P0757 2-3 Shift Solenoid Stuck On	B
P0758 Shift Solenoid (SS) 2 Control Circuit	A
P0973 Shift Solenoid (SS) 1 Control Circuit Low Voltage	A
P0974 Shift Solenoid (SS) 1 Control Circuit High Voltage	A
P0976 Shift Solenoid (SS) 2 Control Circuit Low Voltage	A
P0977 Shift Solenoid (SS) 2 Control Circuit High Voltage	A
P1107 Manifold Absolute Pressure (MAP) Sensor Circuit Intermittent Low Voltage	B
P1108 Manifold Absolute Pressure (MAP) Sensor Circuit Intermittent High Voltage	B
P1510 Control Module Long Term Memory Reset	A
P1740 Cruise Control Feedback Circuit	A
P1875 4WD Switch Circuit	B
P2025 Fuel Vapor Temperature Sensor Performance	B
P2026 Fuel Vapor Temperature Sensor Circuit Low Voltage	A
P2027 Fuel Vapor Temperature Sensor Circuit High Voltage	A
P2227 Barometric Pressure (BARO) Sensor Performance	B
P2228 Barometric Pressure (BARO) Sensor Circuit Low Voltage	A
P2229 Barometric Pressure (BARO) Sensor Circuit High Voltage	A
P2231 HO2S Signal Circuit Shorted to Heater Circuit Bank 1 Sensor 1	B
P2232 HO2S Signal Circuit Shorted to Heater Circuit Bank 1 Sensor 2	B
P2234 HO2S Signal Circuit Shorted to Heater Circuit Bank 2 Sensor 1	B
P2235 HO2S Signal Circuit Shorted to Heater Circuit Bank 2 Sensor 2	B
P2282 Intake Manifold Air Leak	B
P2769 Torque Converter Clutch (TCC) Enable Solenoid Control Circuit Low Voltage	A
P2770 Torque Converter Clutch (TCC) Enable Solenoid Control Circuit High Voltage	A